

 


# DigiView


## Digital Picture Frame




DigiView V101

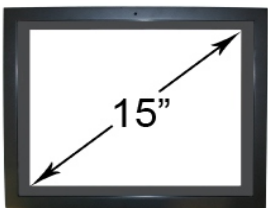


v1501

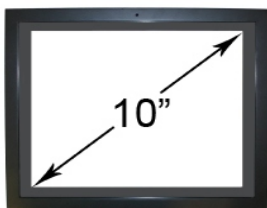


v101

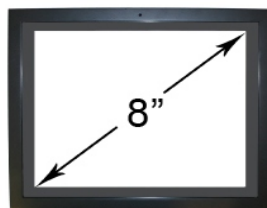

v801

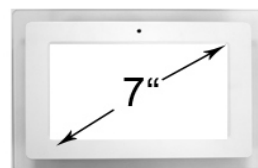

s701/v701

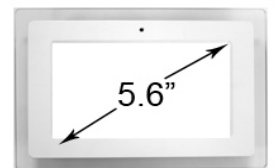

v560

## **Catalogue**

|  |          |
|--|----------|
| <b>1. Product Introduction</b>                 | <b>3</b> |
| <b>2. Package Contents</b>                     | <b>3</b> |
| <b>3. Features</b>                             | <b>3</b> |
| <b>4. Specifications</b>                       | <b>4</b> |
| <b>5. Control</b>                              | <b>5</b> |
| <b>6. Setting up the Digital Picture Frame</b> | <b>5</b> |
| <b>7. Remote Control</b>                       | <b>6</b> |
| <b>8. Playing a Slideshow in Music</b>         | <b>7</b> |
| <b>9. Replacing Remote Control Battery</b>     | <b>7</b> |

## **1. Product Introduction:**

Congratulations on the purchase of the DigiView V101 Digital Photo Frame, with its high quality resolution and stylish frame, the DigiView is the perfect product for displaying your favourite digital photos and video files. The DigiView can be configured to display photos in a slide show or as a still picture. With its ease of use and configuration options, you can now display all your favourite pictures or video files for everyone to see!

## **2. Package Contents:**

Before using the Digital Picture Frame, be sure to check all the accessories contained in the package. The Digital Picture Frame comes with the following items:

- Digital Picture Frame x 1
- AC adaptor x 1
- Remote Control x1
- User Manual x1
- Stand x1


## **3. Features:**

- Display picture and video files without a computer
- Listen to MP3 audio while displaying photos
- Simple operation: insert the compact card into the photo frame to view picture and video files or listen to MP3
- Support: CF—MS/SD/MMC
- TFT-LCD with high resolution, wide view angle and rich color
- Easy to use remote control for displaying and managing your files
- Built-in stereo speakers

## 4. Specifications

|                            |  |
|----------------------------|--|
| <b>Model</b>               | DIGIVIEW V101  |
| <b>Unit Size</b>           | 325 (W) x260(H) x 45 (D) mm  |
| <b>Display Area</b>        | 211.2(H) x 480(V) mm   |
| <b>Resolution</b>          | 640x480/800X600  |
| <b>Colors</b>              | 262,144  |
| <b>Brightness</b>          | 250cd/m <sup>2</sup> max.  |
| <b>Contrast ratio</b>      | 250:1  |
| <b>Viewing angle</b>       | 70/70 (L/R) 40/70(U/D)   |
| <b>Input voltage</b>       | AC110—240V(50HZ—60HZ)  |
| <b>Working Temperature</b> | 0°C - 50°C   |
| <b>Formats</b>             | MPEG1/MPEG2/MPEG4/ JPG/JPEG  |
| <b>Media</b>               | CF/MS/SD/MMC   |
| <b>Default Start Mode</b>  | Auto Slide Show jpeg   |
| <b>Photo Playback Mode</b> | <ol style="list-style-type: none"> <li>1. Loop, Zoom In</li> <li>2. Auto Slide Show</li> <li>3. Slide Show with background MP3 music</li> <li>4. File Name , File Size , Resolution , Date Display</li> <li>5. Interval Time Setup</li> <li>6. Transition Setup</li> <li>7. Play/Stop/Pause</li> </ol> |
| <b>Music Playback Mode</b> | <ol style="list-style-type: none"> <li>1. Play/Stop/Pause</li> <li>2. Volume Adjust</li> <li>3. Mute Function</li> <li>4. Repeat Model Setup</li> <li>5. File Type ,Total Time, Date, Display</li> </ol>   |
| <b>Video Playback Mode</b> | <ol style="list-style-type: none"> <li>1. Play/Stop/Pause</li> <li>2. Volume Adjust</li> <li>3. Mute Function</li> <li>4. Zoom in</li> <li>5. File information, Time and Date Display</li> </ol>   |
| <b>Accessories</b>         | <ol style="list-style-type: none"> <li>1. Remote Controller</li> <li>2. AC Adapter</li> <li>3. desktop stand</li> <li>4. Operation manual</li> </ol>   |

## 5. Control and Slots

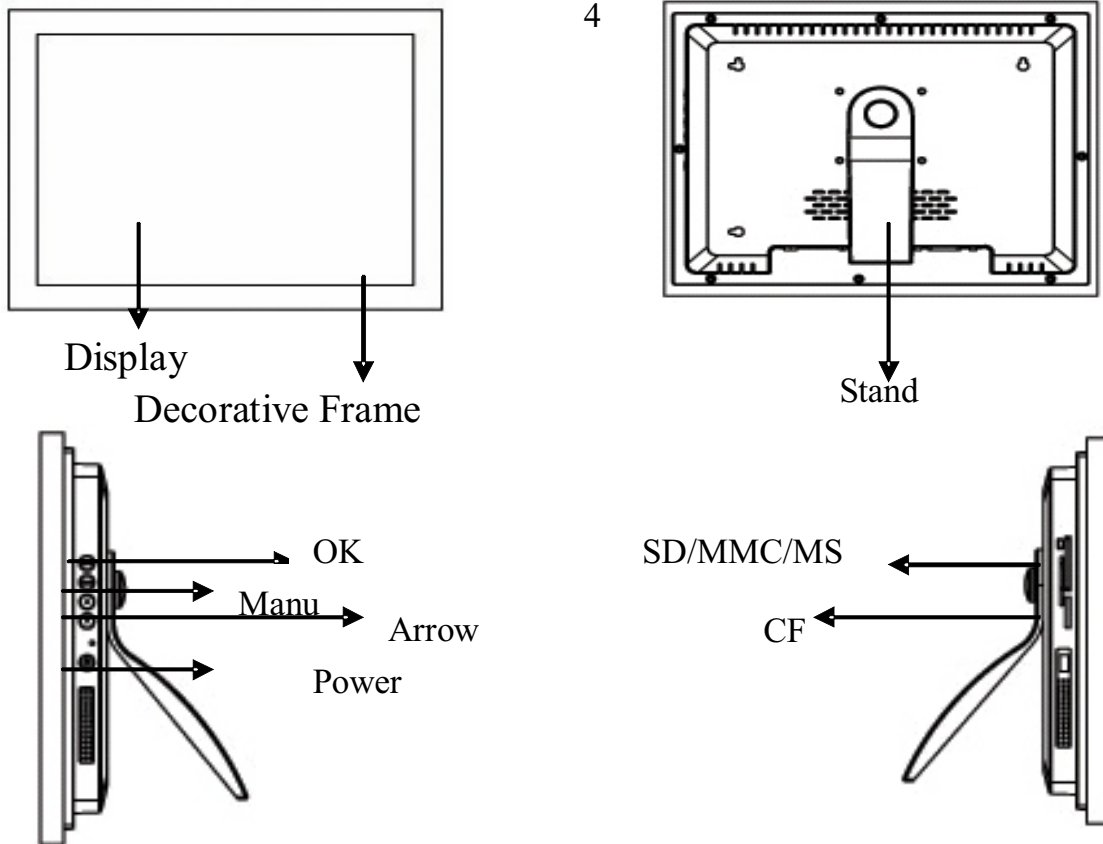

## 6. Setting up the Digital Picture Frame

- Open the package and remove the protective foam. Remove the protective sleeve from the unit.
- Plug-in the AC adaptor into power outlet. Plug the other end into the unit.
- After the content is stored on the target flash media, insert the media into the proper slot.
- Turn power to On position via the On/Off switch. The power switch is on the right side of the frame
- .As default, the first file in the card will be displayed first. The play sequence is automatically sorted by the file name alphabetically regardless of file type. Therefore, a MP3 could be played first, followed by a second MP3 or an image or video file.

## 7. Remote Control:

|             |   |
|-------------|---|
| STAND BY :  | Turn flash-player on or off                 |
| MUTE :      | Mute volume                                 |
| + - :       | Changing volume                             |
| S-MODE :    | Changing slideshow effects                  |
| S-TIME :    | Changing slideshow delay 1;3;... Seconds    |
| INFO/FUN :  | Display file information                    |
| ZOOM :      | Zoom mode                                   |
| ROTATE :    | Rotate photo                                |
| REPEAT :    | Repeat mode                                 |
| PHOTO :     | Into photo mode                             |
| MUSIC :     | Into music mode                             |
| MOVIE :     | Into movie mode                             |
| FILE :      | Into file mode                              |
| MENU :      | Esc card select                             |
| ENTER :     | Enter                                       |
| ▲ :         | Up select                                   |
| ▼ :         | Down select                                 |
| ◀ :         | Left select                                 |
| ▶ :         | Right select                                |
| SETUP :     | Open menu changing settings                 |
| REV :       | Rewind movies                               |
| FF :        | forward movies                              |
| PREV :      | Into previous files                         |
| NEXT :      | Into next files                             |
| SLIDESHOW : | Playing an MP3 as Background to a Slideshow |
| PLAY :      | Into play mode                              |
| PAUSE :     | Into pause mode                             |
| STOP :      | Into stop or esc mode                       |



## 8. Playing a Slideshow in Music

- A. First press “Music” key to enter the music database. Use the arrow keys to select the desired music file.
- B. Press “Slideshow” key. The frame will play the selected MP3 while playing a slideshow.

## 9. Replacing Remote Control Battery

### Replacing the Remote Control Battery

**1**—Remove the battery compartment cover by pulling the cover in the direction of the arrow.



**2**—Remove the battery.



**3**—Insert the replacement battery taking note of the correct polariton (+/-).



**4**—Replace the cover.



#### **Caution:**

1. Only use a 3V CR2025 battery.
2. Dispose of used batteries according to local ordinance regulations.
3. Remove the battery when not using the Flash Player for prolonged periods.



Technical Support  
+44 (0) 1323 508 342