

SOMMER 4020

PROGRAMMING INSTRUCTIONS:

1. Locate your programming button inside the receiver (the box which is on the wall!).

Please note that each button is to be programmed separately (starting from the top button), they are as follows:

2. Press the programming button in the receiver once and a red light will flash next to it. Let go, and press then the first button on the handset. The light should go off.

3. Press the programming button in the receiver twice and a red light will flash next to it. Let go, and press then the second button on the handset. The light should go off.

4. Press the programming button in the receiver three times and a red light will flash next to it. Let go, and press then the third button on the handset. The light should go off.

5. Press the programming button in the receiver four times and a red light will flash next to it. Let go, and press then the fourth button on the handset. The light should go off.