

**vax**<sup>™</sup>  
**ONE**  
**PWR**  
CORDLESS

**vax**  
**BLADE 3**  
**PET**  
CORDLESS VACUUM

**CLSV-B3KP**

VAX Ltd, Artillery House, Heritage Way,  
Droitwich, WR9 8YB, UK

## SAFETY GUIDE

This machine is intended for household use only and NOT for commercial or industrial use.

**PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.**

The full user guide can be found at: [support.vax.co.uk](http://support.vax.co.uk)

### DON'TS

- Don't leave the charger plugged in when unattended.
- Don't use the machine or tools if it is faulty or has been dropped, damaged or left outdoors.
- Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
- Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
- Don't handle the charger, battery or use the machine with wet hands.
- Don't unplug the charger by pulling on the power cord.
- Don't use the charger if the power cord or plug is damaged.
- Don't attempt to remove blockages with sharp objects as this may cause damage to the machine.
- Don't use the machine with the incorrect battery or charger as this may result in damage or injury to the user.  
The correct battery charger information is listed on the battery pack ratings label.
- Don't charge the battery outdoors, or leave the charger connected to the mains when not in use.
- Don't use the machine with a damaged battery. If the battery is damaged contact us on: **08000 927737**
- Don't over fill the dirt container to avoid blocking the air flow through the machine.
- The brushbar in the powered floorhead and mini motorised pet tool constantly rotates when switched on. Never use the powered floorhead or tool on one spot for an extended period of time as the brushbar may damage the surface.

## DO'S

- Only VAX ONEPWR batteries (BV15020/BV15030/BV25040) and charger (BV05100UK) should be used with this machine.
- Only VAX ONEPWR recommended tools and accessories should be used with this machine.
- Always remove the battery from the machine before carrying out any maintenance or if storing unused for a long period of time.
- Keep all openings clear and free from debris as this may affect the airflow/suction.
- Turn off all controls on the machine before disconnecting or connecting the battery, reach wand and accessories.
- Always protect the charger power cord from heated surfaces or near open flames.
- The machine can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the machine in a safe way and understand the hazards involved. Children shall not play with the machine. Cleaning and user maintenance shall not be made by children without supervision.
- Only use the machine indoors on dry surfaces and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
- Store the machine in a cool, dry area. Keep the machine away from rain and moisture.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Take extra care when using the machine on the stairs.
- Always turn the powered floorhead and mini motorised pet tool brushbar off when cleaning hard floors and surfaces. To prevent any damage being sustained, test on an inconspicuous area of the flooring/surface first.
- Always make sure the separator and filter are fitted correctly before using your machine and only use the machine with the filter and separator in place.
- Always check that the powered floorhead, mini motorised pet tool and accessories are free from damage, dirt and debris before using.
- The machine does not stay upright without constant support. Between uses, lie flat on the floor in a suitable location so that it does not become a trip hazard or can be stepped on.

## BATTERY SAFETY PRECAUTIONS

- Replace the battery with a VAX ONEPWR battery only. Use of another battery may present a risk of fire or explosion.
- Don't attempt to disassemble the battery, remove any component projecting from the battery terminals and do not dispose of in a fire. The battery and charger have no user serviceable parts. Fire or injury may result.
- Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. The battery is to be disposed of safely at your local battery recycling centre.
- When the battery pack is not in use, keep it away from other metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- In case of battery leakages, avoid any contact with skin and contact us on: **08000 927737**