

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the points listed below. Read all instructions and safeguards before using.

DANGER

To reduce the risk of injury or death by electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately from the outlet.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Unplug this appliance from the electrical outlet immediately after using, except in the case of charging a rechargeable unit.
5. Always unplug this appliance before cleaning or rinsing blades. Do not have clipper plugged in to power source for maintenance.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- **Warning: Keep the Product Dry.** It is essential to PREVENT electrical equipment from coming into contact with water or other liquids. Only use and store appliance in dry rooms.

- The appliance is only to be used with the power supply unit provided with the appliance.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

- If the power supply cord or plug is damaged, when it is not working properly, after it has been dropped or damaged, or after it has been dropped into water, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Keep the cord away from heated surfaces.

- Insert only battery charger/transformer plug into power receptacle at the bottom of the unit.

- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

- Do not use this appliance with a damaged or broken comb nor with teeth missing from the blades, as injury may occur.

- Always attach plug to appliance first, then to power outlet. To disconnect, turn all controls to off position (0) then remove plug from power outlet.

- Do not crush, disassemble, heat above 100°C (212°F), or incinerate the appliance, due to risk of fire, explosion, or burns.

- During use, do not place or leave the appliance where it is expected to be subject to damage by an animal, or exposed to weather.

- If your appliance is not a battery-operated appliance that must be recharged, it shall never be left unattended when plugged in.

If your appliance has a battery:

- The battery must be removed from the appliance before it is scrapped

- The appliance must be disconnected from the supply mains when removing the battery

- The battery is to be disposed of safely

Model 9649 / 9655N

1. Disconnect the power supply from the unit and switch on the appliance to discharge the battery completely.
2. Remove the blade assembly from clipper and remove the two screws exposed.
3. Using a screwdriver, remove the top cover piece by prying under the tabs on each side until the tabs are disengaged.
4. Lift the cover piece away from the top base enclosure.
5. Remove the 3 screws exposed.
6. Pull the battery pack up and twist until it detaches from the clipper.

Model 2562 / 2563

1. Disconnect the power supply from the unit and switch on the appliance to discharge the battery completely.
2. Remove the blade assembly from clipper and remove the two screws exposed.
3. Remove a third screw that is at the bottom of the unit under the data insert sticker.
4. Pull the top and bottom enclosure away from each other until they snap apart.
5. Pull the battery pack up and twist until it detaches from the clipper.

SAVE THESE INSTRUCTIONS

This appliance is intended for household use.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling