




INSTALLATION MANUAL

STANDARD ACCESSORIES

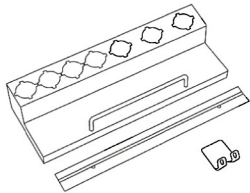

Nail set*2





Sticker*2



Nail-free glue*1

(NOTICE: Some Amazon warehouses don't supply nail-free glue according to logistic policy, please purchase it in local stores.)

ROUGH UNEVEN SURFACE. Such as paint finish, plaster wall, cement wall, wallpaper ...

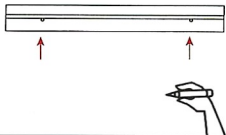
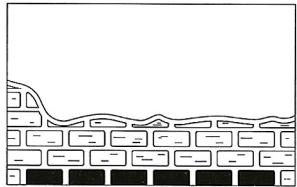


- 1 Clean the wall, draw the line. Confirm the screw hole position.





Expansion screw

- 2 Drill the hole and put the expansion screw into the hole.

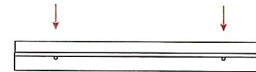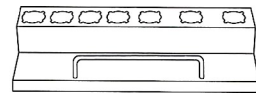


- 3 Finish.

FLAT SMOOTH SURFACE. Such as flat tile, glass, board, smooth marble, flat metal, mirror ...

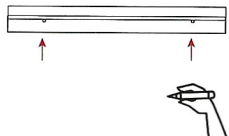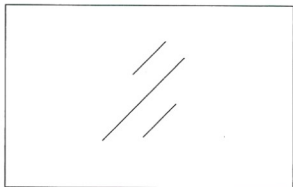


- 1 Clean the wall, draw the line. Confirm the position.

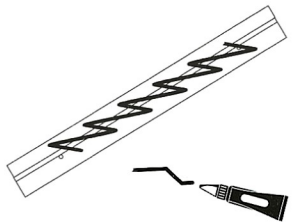


Nail-free glue

- 2 Paint the mount bar with glue.

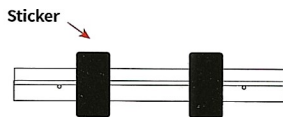

⚠ WAIT FOR 72 HOURS!

- 3 Stick the mount bar to the smooth surface and use the sticker to strengthen.

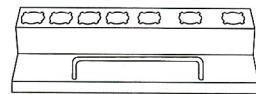

- 4 Finish. After 72 hours, you can remove the sticker and start to use our product.

