



# Adjustable Bed

## Operating Instructions

# Notes

For your records.

Date Purchased: 30-06-2021

Name of Retailer: 'it's bed time'

# CONGRATULATIONS!

You are now the proud owner of an electrically adjustable bed, a high quality precision-engineered product.

Before leaving our premises, every part has been thoroughly checked by us to ensure optimum function. By following the instructions contained within this manual, you will enjoy many trouble free years of excellent performance. Should the occasion arise that you need service information, please contact your supplying retailer.



## Operating the Bed

First, study your handset carefully.



### Handsets

1. Head Up
2. Head Down
3. Head and Foot Up
4. Head and Foot Down
5. Foot Up
6. Foot Down

For best results, lie on the bed starting in the completely flat position. The amount that you elevate each section of the bed is a purely personal decision, but, with an infinite number of positions available, an optimum comfort will soon be found to suit your individual requirements.


When the head end is elevated, it is advisable to raise the foot end slightly as this will reduce the possibility of you sliding down the bed. This may also help improve your circulation.

## Lumbar Support Adjustment

Within the lumbar section of your bed, there are several adjustable slats which may be made firmer or softer by sliding their tensioners closer together or further apart. See illustration below.

This will allow you to adjust the amount of support provided across the lumbar region and will be of assistance should you suffer from discomfort due to spinal sensitivity.

The adjustment can also be used to compensate for weight fluctuation.

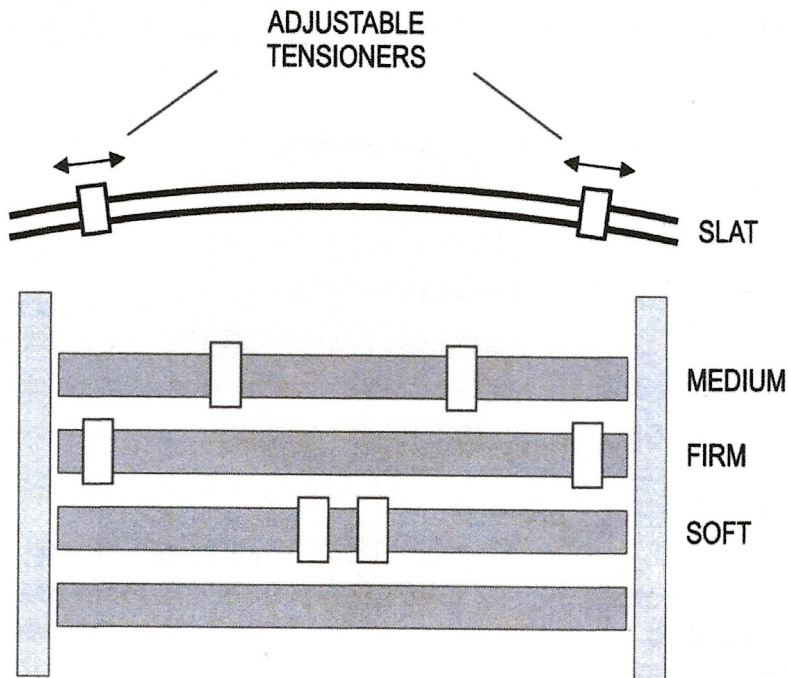

## **Caring for your bed - Some important do's and don't's**

1. **UNDER NO CIRCUMSTANCES** sit on the end of the bed when it is in the raised position.
2. Do not allow children to bounce on the bed.
3. Do not attempt to manually raise or lower the moveable sections.
4. Only fit approved supplied parts to the bed. No other form of addition may be used.
5. Do not fit electric blankets, frills, straps, in such a way that the mechanism is impeded in its operation. If in doubt, contact your supplying retailer.
6. Remember that all beds are best used for the purpose for which they are intended. While we all sit on the side of our bed, it is not designed for this, so try to keep it to a minimum.
7. Do ensure, if you have them, that all bed legs are securely tightened from time to time.
8. Caring for your bed should be limited to an occasional dusting of the slats and slat mountings.
9. Within the 2 year guarantee period, all replacement parts are free if no abuse has taken place. A service charge may be levied dependent on circumstances and distance involved.

## **Mattress and Cover Care**

All mattresses require periodic turning to help ensure even wear, long life and therefore optimum comfort. Where there is a high risk of soiling, a special waterproof mattress protector should be used.

## Safety Information


Do not attempt to open the motor or the control unit cases. Unauthorised opening of the housing and improper repairs can create risks for the user and will invalidate the product warranty. Repairs must only be carried out by the manufacturer.

Do not allow liquids to enter the controls or motor. This can result in shocks or short-circuits.

The controls and motors must only be used for the purpose specified in this manual.

Do not operate the unit in damp or humid conditions or outdoors.

# Adjustable Bed

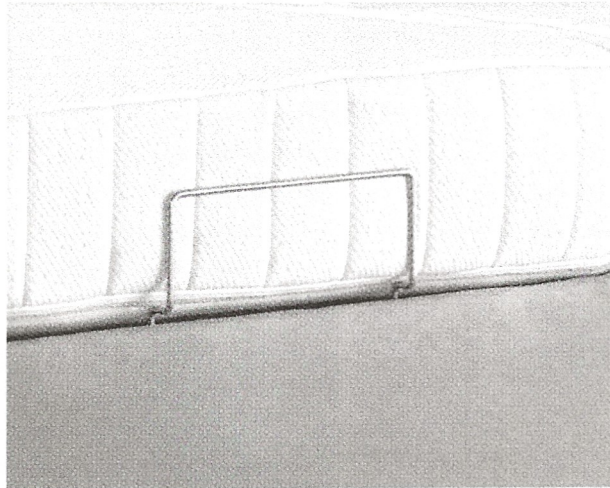

Please attach mattress retaining bar where indicated, this will hold the mattress in place when adjustable bed is used.

---